

Locate removable door on scoreboard. Remove door and remove cover of electrical enclosure to make connections shown to right.

Notes:


- 1) Phillips head screw driver required to remove door and cover.
- 2) Be sure to replace cover and door after installation.
- 3) Some scoreboards will already have a cable routed in the board for this application.
- 4) Note serial number on back of receiver assembly for programming MPCW controller.

Panel will be located near electrical enclosure


Remove existing panel near electrical enclosure and route supplied cable from OCM to opening. (keep screws to install receiver assembly)

Receiver Assembly

Connect cable to receiver assembly and mount receiver assembly using existing screws

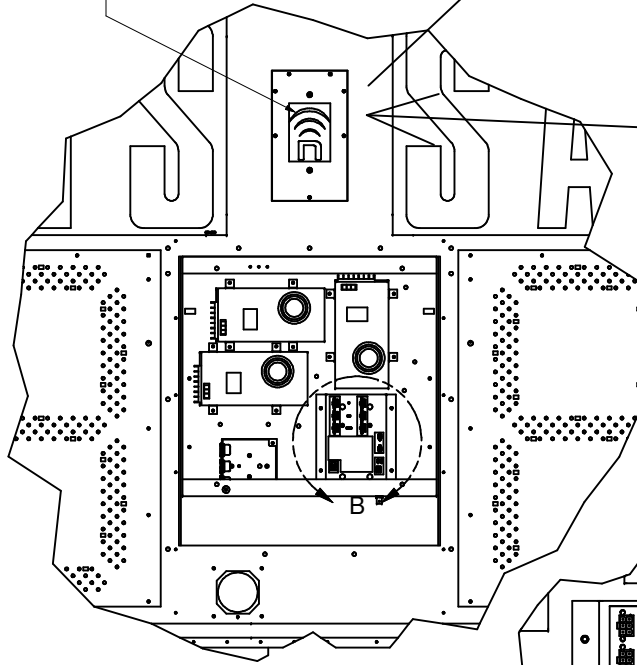

DETAIL A

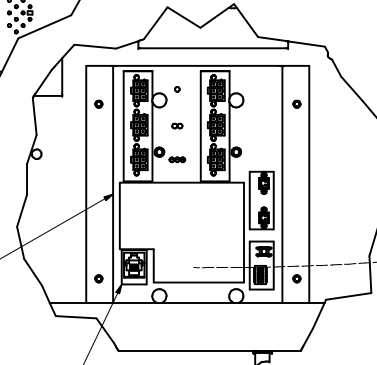


Outdoor Control Module (OCM)

Connect cable here

DETAIL B

Route supplied cable from OCM to opening where the receiver assembly is to be installed BEFORE mounting receiver assembly.

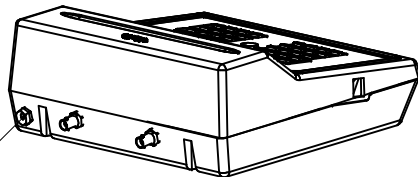

Connect to power

MPCW Operator's Control

Wireless Outdoor MPCW-7 Receiver Installation



Nevco, Inc. Greenville, Illinois 62246

Drawing No. 275-0681

Drawn DBB

Date 08/08/11

Sheet 1 of 1